



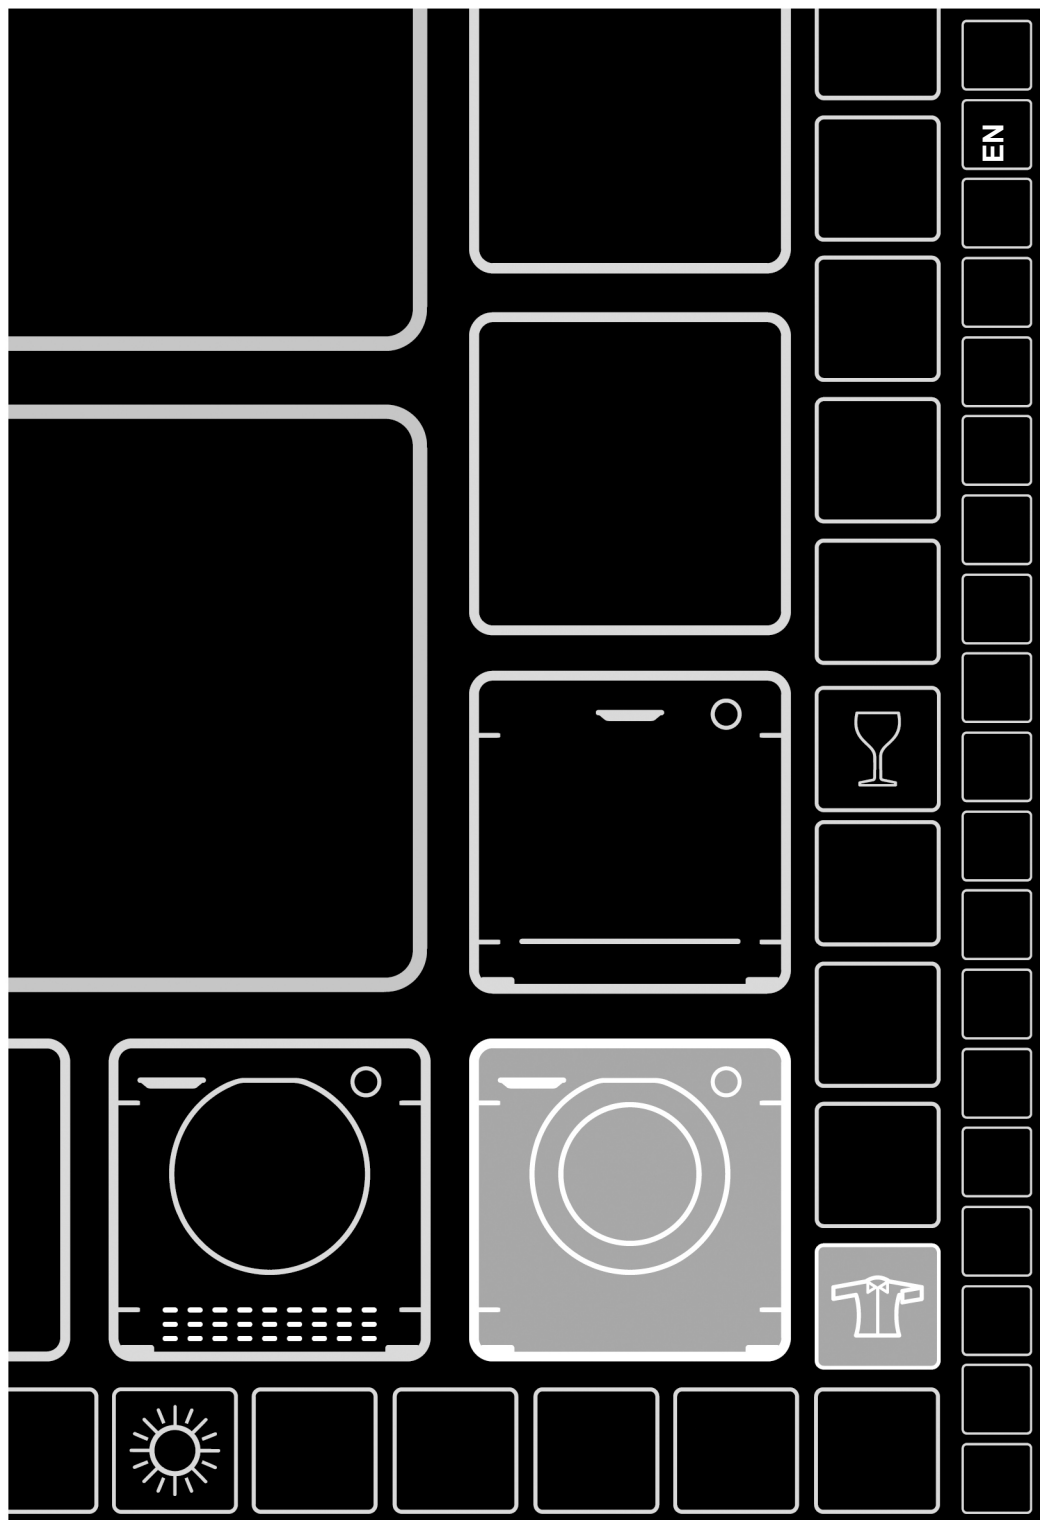

5-1

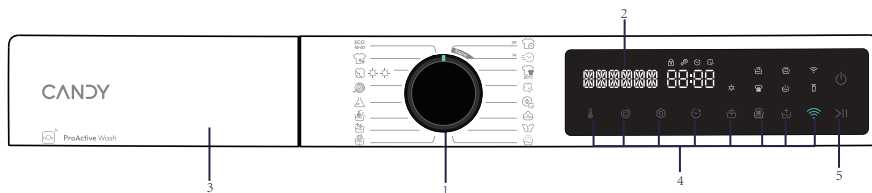

- | | | |
|----------------------|------------------------------|------------------------|
| 1 Programme selector | 3 Detergent /Softener drawer | 5 "Start/Pause" button |
| 2 Display | 4 Function buttons | |



Note: Acoustic signal

The acoustic signal can be selected or canceled if necessary; see DAILY USE (see P25 8.12).


5-2



5.1 OFF

Turn on/ off the machine through this power button (Fig.5-2).

5-3

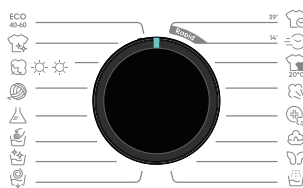


5.4 Detergent drawer

Open dispenser drawer, the following components can be seen (Fig. 5-5):

- 1: Compartment for powder or liquid detergent.
- 2: Detergent flap selector, lift it up for powder detergent, keep it down for liquid detergent.
- 3: Put a small amount of washing powder.
- 4: Compartment for softner.
- 5: Lock tab, press it down to pull out dispenser drawer.

The recommendation on the type of detergents is suitable for the various washing temperatures, please refer to the manual of detergent

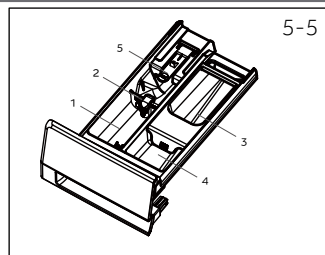


5.5 Function buttons

The function buttons (Fig. 5-6) enable additional options in the selected programme before programme starts. The related indicators are displayed.

By switching off the appliance or setting a new programme, all options are displayed.

If a button has multiple options, the desired option can be selected by pressing the button sequentially.

By touching the buttons, when it is in dull light, the function is unselected: when it is in bright light, the function is selected.

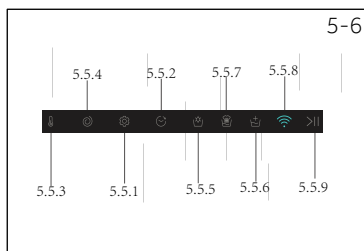

Note: Factory settings

To get best results in each programme has well defined specific default settings. If there is no special requirement default settings are recommended.

5.5.1 setup " ⚙ "

- Choose language type, and voice switch after startup.



5-7

5.5.2 Function button " ⌚ "

- This button (Fig. 5-8) allows you to preprogramme the wash cycle to delay the start of the cycle for up to 24 hours.
- To delay the start use the following procedure:
 - Select the required programme.
 - Press the button once to activate the delay start and Turn the to select the appointment time again to set the desired delay. The delay increases in steps of 30 minutes, with a maximum of 24 hours delay.
 - Confirm by pressing the Start/Pause button. The delay countdown will begin and when it has finished, the programme will start automatically.
- It is possible to cancel the delay start Press Return to cancel the appointment



5-8

5-9



5.5.3 Function button "🌡️"

- Touch this button (Fig.5-9) to change the washing temperature of the programme. If no light is illuminated and display "--", the water will not be heated.

5-10



5.5.4 Function button "🌀"

- Touch this button (Fig.5-10) to change or deselect the spin of the programme. If no light is illuminated and display "0", the appliance will not spin



Note: Speed

After selecting this function, user cannot select speed. But the machine will complete spinning process.

5-11



5.5.5 Function button "☀️👑"

- This button (Fig.5-11) This button can select the drying function. Continuous pressing can select different drying intensities and times. This button can only be selected by some programs, and cannot be selected when the program light is off.

5-12



5.5.6 Function button "👑➕"

touch this button (Fig.5-12)

Pre wash

This option allows you to make a prewash and it is particularly useful for heavily soiled loads (can be used only on some programmes as shown in the table of programmes).

Extra rinse

This option allows you to add one rinse at the end of the washing cycle and is useful for people with delicate and sensitive skin, for which a small amount of detergent residue can cause irritations or allergies. It is advisable to also use this function for the children clothes and for the washing of heavily soiled items, which requires a lot of detergent to be used, or for the washing of toweling items whose fibers mostly have the tendency to hold the detergent.

5.5.7 Half load&Intensive

- touch this button(Fig.5-11)


● Half load

Select the icon is Half load,for the case of less load or not too dirty;

● Intensive

Select the icon is Intensive, for the case of more load or dirty, the washing time will be longer;

Some programs have both lights off, indicating that these two functions are not selectable; some programs have both lights half-lit, indicating that these two functions can be selected, but they cannot be selected at the same time.

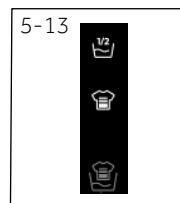

5.5.8 Function butt on " "

- touch this button(Fig.5-14)

If the appliance is not paired to hOn'App, short press the button is to start the pairing process; if the appliance has been paired to hOn'App, short press the button is to start the remote control.

Long press this button is to delete the pairing credentials.



5.5.9 Function button " >|| " "

Touch this button (Fig.5-15) gently to start or interrupt the currently displayed programme.



Note: Child lock

After the program starts running, long press "  " + "  " key Open or close the child lock

5.6 First starting

5.6.1 Language setting

- Power on the machine and press this button " >|| " to set languages and sounds.
- To switch languages, rotating the knob and click " >|| " to confirm your choice.
- Rotating the knob to turn on or off the beep sound, then click " >|| " to confirm.

5.6.2 Change the language



Note:

Selecting Turn Off Voice can only turn off the prompt Voice, not the alarm Voice.



Press the "Settings" key or select the "Back" icon to return to the previous menu.

● Yes ○ Optional / No		kg MAX KG WashingDrying 89101213568 KGKGKGKGKGKGKGKGKG								STD TEMP	MAX TEMP	PRESET SPIN	MAX SPIN	Detergent compartment for: 1 Detergent 2 Softener 3 Prewash ¹⁾										
		1	2	3	Dry	Intensive	Pre wash	Extra rinse	Delay					Half load										
ECO 40-60	Eco 40-60 ²⁾	8	9	10	12	13	5	6	8	40	90	MAX ³⁾	MAX	●	○	○	○	○	○	○	○	○		
39'	Special 39'	2	2	2	3	3	2	2	3	30	30	800	MAX	●	○	/	○	/	/	○	○	/		
14'	Rapid	1	1	1	1	1	1	1	1	30	30	800	MAX	●	○	/	○	/	/	○	○	/		
20°C 20°C Cold Wash	20°C Cold Wash	8	9	10	12	13	3	4	6	20	20	1000	1000	●	○	/	○	○	/	○	○	○		
Anti-Pollution	Anti-Pollution	8	9	10	12	13	5	6	8	60	90	MAX	MAX	●	○	/	○	○	/	/	○	/ ⁴⁾		
Hygiene Plus 59'	Hygiene Plus 59'	2	2	2	2	3	2	2	2	60	90	MAX	MAX	●	○	/	○	○	/	/	○	/ ⁴⁾		
Cotton	Cotton	8	9	10	12	13	5	6	8	30	90	MAX	MAX	●	○	○	○	○	○	○	○	○		
Delicate	Delicate	2	2	2	3	3	/	/	/	30	40	400	400	●	○	/	/	/	/	/	○	/		
Rinse	Rinse	8	9	10	12	13	3	4	6	/	/	1000	1000	/	○	/	○	/	/	/	/	/		
Drain & Spin	Drain & Spin	8	9	10	12	13	5	6	8	/	/	1000	MAX	/	/	/	○	/	/	/	/	/		
Drum Clean	Drum Clean	/	/	/	/	/	/	/	/	90	90	600	600	/	/	/	/	/	/	/	/	/		
DRY WOOL	DRY WOOL	/	/	/	/	/	0.4	0.4	0.4	/	/	800	800	/	/	/	●	/	/	/	/	/		
Hand Wash	Hand Wash	2	2	2	3	3	/	/	/	30	60	800	800	●	○	/	/	/	/	○	○	/		
Synthetics	Synthetics	5	6	7	8	9	2.5	3	4	40	60	1200	1200	●	○	○	○	○	○	○	○	○		
HIGH HEAT	HIGH HEAT	/	/	/	/	/	5	6	8	/	/	MAX	MAX	/	/	/	●	/	/	/	/	/		
Whites	Whites	5	6	7	8	9	2.5	3	4	30	60	1000	1000	●	○	○	○	○	○	○	○	○		

INFORMATION FOR THE TEST LABORATORIES
STANDARD PROGRAMME ACCORDING TO (EU) No 2019/2023: ECO 40-60 PROGRAMME

1) A little detergent can be added only with the pre-wash function.

2) Eco 40-60 changed the program name to cotton after changing the parameters.

3) The maximum speed of 10 kg is 1600, and the maximum speed of 8kg 12kg 13kg is 1400.

4) This function can only be selected after adjusting the temperature to cancel the  icon.

Description of programmes

To clean different types of fabrics and various levels of dirt, the washing machine has specific programs to meet every need of washing (see table of programmes).



Choose programme in accordance with the laundry instructions appearing on labels, especially the maximum recommended temperature.



WARNING!

IMPORTANT WASH PERFORMANCE ADVICE.

- ▶ New, coloured garments should be washed separately for at least 5 or 6 washes.
- ▶ Certain large dark items such as jeans and towels should always be washed separately.
- ▶ Never mix NON COLOURFAST fabrics.

Eco 40-60

The Eco 40-60 programme is able to clean normally soiled cotton laundry declared to be washable at 40°C to 60°C, together in the same cycle. This programme is used to assess the compliance with the EU Ecodesign legislation (environmentally friendly products design).

Special 39'

This programme allows you to wash different fabrics together such as cottons, synthetics and mixed fabrics in only 39 minutes at 30°C (or less) temperature. This programme is particularly suited to slightly dirty fabrics, **up to half of nominal load**.

Rapid

Saving without compromising! This new programme may be used to obtain excellent results while saving water, energy, detergent and time. This option washes at a medium temperature suitable for lightly soiled mixed laundry of cotton and synthetic. Recommended for small loads and lightly soiled items

20°C Cold Wash

This innovative programme, allows you to wash different fabrics and colours together, such as cottons, synthetics and mixed fabrics at only 20°C and provides an excellent cleaning performance.

Anti-Pollution

This program has a high temperature and can use steam to help better care and remove stains, with less detergent residue. It is only suitable for washing clothes made of cotton and linen materials

Hygiene Plus 59'

This washing programme is capable of reaching a temperature of 60°C for an extended period of time, combining the steam action with a powerful rinsing action for thoroughly clean and hygienic clothing. Recommended for cotton fabrics.

Cotton

This programme is suitable for washing coloured cotton garments at 40°C or for ensuring the highest degree of cleanliness for Cotton resistant laundry washing at 60°C or 90°C. The final spin is at maximum speed that ensures excellent water removal.

Delicate

Developed to take good care of delicate items, this programme washes at a low temperature in short time. An extended, in - depth rinse nourishes fabric fibres

Rinse

This program performs 2 rinses with an intermediate spin (which can be reduced or excluded by using the appropriate button). It is used for rinsing any type of fabric, for example after a wash carried out by hand.

Drain & Spin

The program completes the drain and a maximum spin. It is possible to delete or reduce the spin through the " @ " button.

Drum Clean

This program can carry out the self-cleaning of the washing machine.

We recommend a bucket self-cleaning after using the washing machine for 50 times.

When using this program, please do not put any clothes detergent or washing machine cleaner.

DRY WOOL

Low temperature drying programme, ideal to dry woollen clothes with maximum care and softness, reducing rubbing of fabrics related to the amount of the washing and the spin speed selected for the wash. The cycle is suitable for small loads up to 0.4 kg (1 sweaters).

Hand Wash

This programme performs a wash cycle dedicated to the fabric that can be washed in a washing machine, the articles to be washed by hand.

Synthetics

This programme allows you to wash different fabrics and different colours all together. The rotation movement of the drum and the water levels are optimized, both during the washing the rinsing phase. The accurate spin action, ensures a reduced formation of creases in the fabrics

HIGH HEAT

High temperature drying programme recommended for cottons and linen items (always refer to the laundry care label).

Whites

Suitable for washing large clothes that are not too dirty, can help wash more clothes



Note: The procedure to check the number of cycle that the machine has run.

Procedure: under standby mode, select " Cotton " programme first, then press " @ " and " @ " at the same time, it will display the number of running cycle for 2 seconds, and then back to standby interface. The cumulative running cycles will add after the programme ends. The running cycles will be displayed in hexadecimal if it is over 9999.

7-Consumption

EN

Scan QR code on energy label for energy consumption information.

The actual energy consumption may differ from the declared one according to local conditions.



Note: Auto Weight

The appliance is equipped with a loading recognition. At low loading, energy, water and washing time will be reduced automatically in some programmes. The display default time may vary depending on the load weight, involving the "Synthetics", "Cotton", "Anti-Pollution 20°C Cold Wash", "Eco 40-60", "Hygiene Plus 59", programme.

Indicative information(as per Commission Regulation (EU) 2019/2023):

Rated Capacity	Programme	 (kg)	 (HH:MM)	ENERGY (kWh/cycle)	 (L/cycle)	Max Temperature (°C)	Effective Speed (RPM)	 Residual isture (%)
9 kg (1400r)	Eco 40-60	8	3:38	0.520	54	28	1330	53.0
	Eco 40-60	4	2:48	0.330	35	26	1330	52.0
	Eco 40-60	2	2:38	0.190	30	25	1330	56.0
	Eco 40-60+DRY Cupboard	5	7:30	3.150	74	26	-	0.0
	Eco 40-60+DRY Cupboard	2.5	5:00	1.920	44	25	-	0.0
	Cotton 20°C	8	1:58	0.220	75	20	1000	65.0
	Cotton 60°C	8	3:03	2.100	75	57	1400	53.0
	Synthetic 40°C	5	1:35	1.000	65	40	1200	37.0
10 kg (1600r)	Papid care 14'30°C	1	0:14	0.250	38	30	1000	65.0
	Eco 40-60	10	3:58	0.865	76.0	35	1550	52.0
	Eco 40-60	5	2:58	0.550	46.0	33	1550	52.0
	Eco 40-60	2.5	2:48	0.240	33.0	25	1550	56.0
	Eco 40-60+DRY Cupboard	6	8:00	3.700	78.0	26	-	0.0
	Eco 40-60+DRY Cupboard	3	5:20	2.050	50.0	25	-	0.0
	Cotton 20°C	10	1:58	0.220	85.0	20	1000	65.0
	Cotton 60°C	10	3:03	2.500	85.0	57	1550	53.0
12/13 kg (1400r)	Synthetic 40°C	7	1:35	1.000	65.0	40	1200	37.0
	Papid care 14'30°C	2	0:14	0.250	40.0	30	1000	54.5
	Eco 40-60	12	3:58	0.810	74.0	33	1330	53.0
	Eco 40-60	6	2:58	0.590	47	30	1330	52.0
	Eco 40-60	3	2:48	0.220	33	25	1330	55.0
	Eco 40-60+DRY Cupboard	6	8:00	3.700	78.0	26	-	0.0
	Eco 40-60+DRY Cupboard	3	5:20	2.050	50.0	25	-	0.0
	Cotton 20°C	12	1:58	0.250	100	20	1000	65.0
	Cotton 60°C	12	3:03	2.800	100	57	1400	55.0
	Synthetic 40°C	8	1:35	1.000	65	40	1200	37.0
	Papid care 14'30°C	1	0:14	0.280	45	30	1000	65.0

The values given for programmes other than the Eco 40-60 programme and the wash and dry cycle are indicative only.

8.5 Selecting detergent

- ▶ Washing efficiency and performance is determined by used detergent quality.
- ▶ Use only machine wash approved detergent.
- ▶ If needed use specific detergents, e.g for synthetic and woolen fabric.
- ▶ See tips for countertop detergent stickers.
- ▶ Do not use dry cleaning agents such as trichloroethylene and similar products.

Choose the best detergent

Programme	Kind of detergent				
	Universal	Colour	Delicate	Special	Softener
Eco 40-60	√	√	-	-	√
Special 39'	√	√ L	-	-	√
Rapid	L	√ L	-	-	√
20°C Cold Wash	√	√	-	-	√
Anti-Pollution	√ P	√	-	-	√
Hygiene Plus 59'	√ P	√	-	-	√
Cotton	√	√	-	-	√
Delicate	-	-	√	√	√
Rinse	-	-	-	-	√
Drain & Spin	-	-	-	-	-
Drum Clean	-	-	-	√	-
DRY WOOL	-	-	-	-	-
Hand Wash	-	-	√	√	√
Synthetics	-	√	-	-	√
HIGH HEAT	-	-	-	-	-
Whites	√ P	√	-	-	√

L = gel-/liquid detergent P = powder detergent O =no Reconnommended= √
 -=Not recommended

If using liquid detergent, it is not recommended to activate the time delay.

We recommend by using:


- ▶ Laundry powder: 20°C to 90°C* (best use: 40-60°C)
- ▶ Color detergent: 20°C to 60°C (best use: 30-60°C)
- ▶ Wool/delicate detergent: 20°C to 30°C (best use: 20-30°C)

* Choose 90 °C wash temperature only for special hygienic requirements.

* If you choose the water temperature 60°C or above, we would like to advise you to use less detergent.

* It is better to use less or free suds detergent powder.

* Suggested detergent type on remote control depends on the program chosen on APP.

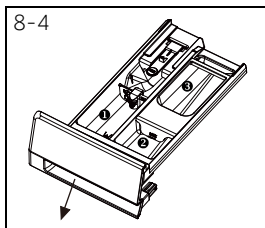


8.6 Adding detergent

1. Slide out the detergent drawer.
2. Put the required chemicals into corresponding compartments (Fig. 8-4).
3. Push back the drawer gently.




Note:

- ▶ Remove detergent residues before next wash cycle from the detergent drawer.
- ▶ Do not overuse detergent or softener.
- ▶ Please follow the instruction on the detergent package.
- ▶ Always fill the detergent just before the beginning of the wash cycle.
- ▶ Concentrated liquid detergent should be diluted before adding.
- ▶ Do not use liquid detergent if function "Delay" is selected.
- ▶ Carefully choose the programme settings according to the care symbols on all laundry labels and according to the programme table.

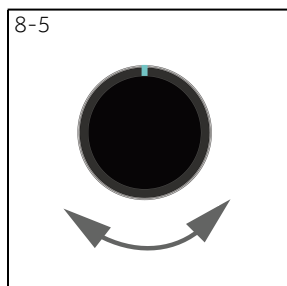

8.7 Select a programme

To get the best washing results, select a programme which fits the degree of soiling and sort of laundry type. Turn the programme knob (Fig. 8-5) to select the right programme. The display will show the selected programme name.

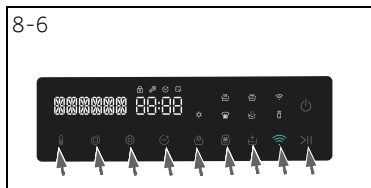

8.8 Add individual selections

Select required options and settings (Fig. 8-6); refer to Control Panel.

8.9 Start wash programme

Touch "Start/Pause" button (Fig. 8-7) to start.

Appliance operates according to present settings.

Changes are only possible by cancelling the programme.



8.10 Interrupt / cancel wash programme

To interrupt a running programme press gently "Start/Pause". The screen will display "pause" is flashing. Press it again to resume operation.

To cancel a running programme and all its individual settings:

1. Touch "Start/Pause" button to interrupt the running programme.
2. Turn the knob to the programme Drain & Spin and select "Speed is" 0" to drain the water.
3. After closing the programme to restart the appliance, select a new programme and start it.
4. After closing the programme to restart the appliance, select a new programme and start it.

8.11 After washing



Note: Door lock

- For safety reasons the door is locked partially during the washing cycle. It is only possible to open the door at the end of the programme or after the programme was cancelled correctly (see description above).
- In case of high water level, high water temperature and during spinning it is not possible to open the door; Lock is displayed.

1. At programme cycle End is displayed.
2. The appliance switches off automatically.
3. Remove laundry as soon as possible to go easy on it and to prevent more wrinkling.
4. Turn off the water supply.
5. Unplug the power cord.
6. Open the door to prevent formation of moisture and odours. Let it open while not used.



Note: Standby-mode / energy-saving mode

The switched on appliance will go into standby-mode if it will not be activated within 2 minutes before starting the programme or at the end of programme, except REMOTE CONTROL. The display switches off. This saves energy.

Press the power button to turn on.

8.12 Activate or deactivate the buzzer

The acoustic signal can be deselected if necessary:

By pressing the setting key to select the voice switch, press the setting key to first select the language, press confirm to enter the voice selection, the icon  will automatically jump to the sound selection interface, the voice is turned on to select "Voice on", off to select "Voice off", and confirm through the start and stop keys